RAPID KERB



# INSTALLATION GUIDE

# RAPID KERB INSTALLATION GUIDE

## THE FOLLOWING MATERIALS ARE NOT SUPPLIED:

- Gun-grade expanding foam
- Hybrid silicone (soudal hightack)
- 30mm no.4 wood stainless steel screws
- Alcohol cleaner
- Paper roll
- Nitrile Gloves




**CORRECT INSTALLATION IS ESSENTIAL FOR WARRANTY COMPLIANCE**

# TOOLS REQUIRED - NOT SUPPLIED

- Tape measure
- Expand foam gun
- Impact screwdriver
- Drill
- 3mm drill bit
- Silicone gun
- Silicone tool or scrapper



## STEP 1 – POSITION THE RAPID KERB


Using a tape measure centralise the rapid kerb over the hole you have created, ensuring it is correctly positioned.


Once you are satisfied with the position, use a marker pen to draw around the outside of the kerb.

Remove the kerb and place it to one side.
Ensure the roofing deck is clean, dry, and free from dust and debris before proceeding.

Apply your chosen hybrid silicone adhesive to the roofing deck in two continuous beads:

- First bead: approximately 5mm from the marked line.
- Second bead: approximately 50mm from the marked line.

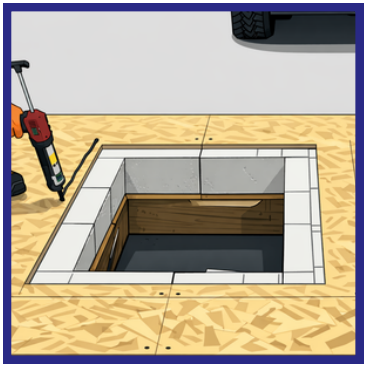

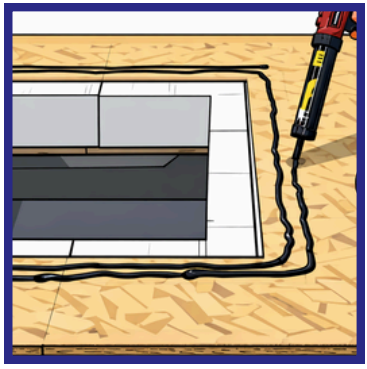


## STEP 2 – PREPARE THE KERB

Using an alcohol-based cleaner, thoroughly wipe the underside of the kerb to ensure it is clean and free from dust and debris.

## STEP 3 – REPOSITION THE KERB


Place the kerb back onto the roof deck, aligning it carefully with the outline you previously marked.

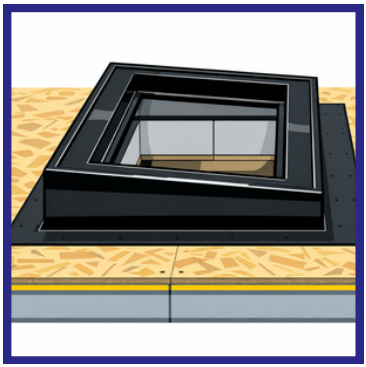




## STEP 4 – PILOT DRILL

Using the indentations in the kerb as a guide, drill 3mm pilot holes in the centre of each indentation. It is recommended to secure the kerb with a couple of screws to prevent it from moving while you work your way around the entire kerb.

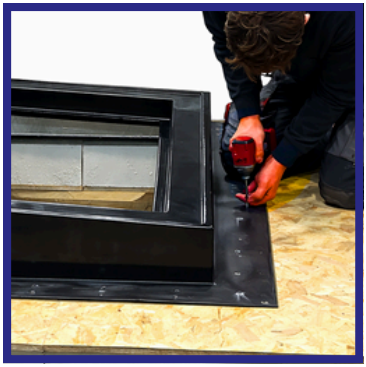

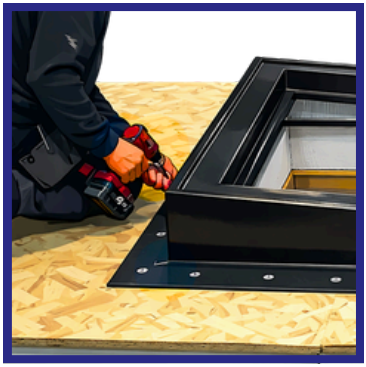

## STEP 5 – SECURE THE KERB

Using **No.4 x 30mm** wood screws, secure the kerb to the roof deck. Work your way evenly around the kerb to ensure consistent fixing. Remove any excess adhesive using the silicone tool.





## STEP 6 – INSULATE INTERNALLY

From the inside, use expanding foam and an applicator gun to fill the void between the kerb's PIR insulation and the roof deck.

Once the foam has cured, remove any excess using a saw or sharp knife before plasterboarding internally.


## COMPLETION

YOU ARE NOW READY TO GLAZE THE ROOFLIGHT

SCAN TO WATCH A RAPID KERB INSTALLATION

## THANK YOU FOR CHOOSING RAPID KERB



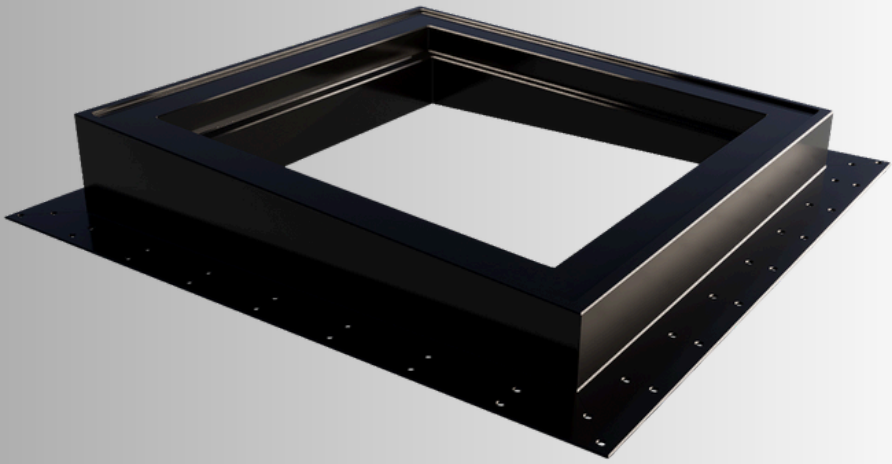

RAPID KERB

RAPIDKERB.CO.UK